



ASSEMBLY GUIDE



LQS WIRE SHELVING



Read and understand all of the instructions and safety information in this document before assembling this product.

SAVE THESE INSTRUCTIONS

LQS WIRE SHELVING PARTS & HARDWARE

TOOLS NEED

- Nylon or Rubber Base Hammer

PARTS & HARDWARE	QTY
1. Wire Shelves	Varies
2. Posts	4
3. Split Sleeves	4/Shelf
4. Casters*	4
5. Leveling Feet*	4

*Based on your order, you will receive either Casters OR Leveling Feet.



Swivel Caster

Brake Caster

Leveling Feet

ASSEMBLY INSTRUCTIONS

MOUNT FIRST SHELF (BOTTOM)

Refer to location of numbers on posts, snap tapered split sleeves on each post at the desired position for bottom shelf. The thickest part of the tapered split sleeve goes to the bottom side of post. Be sure that the split sleeves have been seated properly in the groove. Install bottom shelf first by sliding over the posts.

MOUNT ADDITIONAL SHELVES


Continue process for the next shelf by snapping split sleeves in the preferred location as before and sliding the shelf into position. Follow the same procedure with each shelf working from the bottom up.

SECURE SHELVES


Place a board across the shelf corners and tap very lightly with a nylon or rubber base hammer to seat the shelf on the split sleeves. CAUTION: Do not hammer directly on the wires or corner.

LEVELING OF UNIT


For wire racks with leveling feet place unit at desired location, and level using a bubble level. The leveling bolts, on post bottom, allow ½" adjustments.

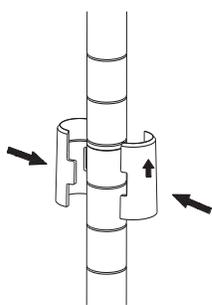

Snap plastic tapered split sleeves on each post

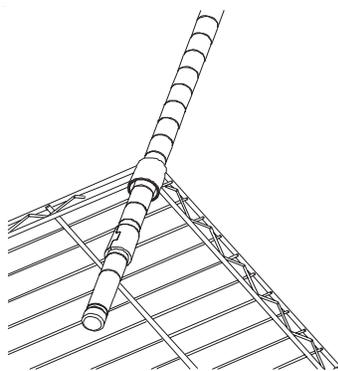

Install shelf by sliding over the posts

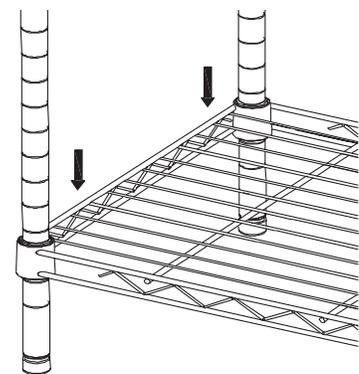

Tap very lightly with a nylon or rubber base hammer to seat the shelf on the split sleeves



LIMITED 5-YEAR WARRANTY

LogiQuip products are covered by a Limited 5-Year Warranty from date of receipt against defect in materials or workmanship under normal use and service, excluding Electronic Components, Cart Covers, Custom Products, and LogiCell Tambour Doors. During this period, LogiQuip will, in its sole discretion, repair defects in materials or workmanship that existed when the product was received or replace the product. Visit [LogiQuip.com/Warranty](https://www.logiquip.com/Warranty) for more details.

CUSTOMER SERVICE

If you have any problems with your LQS Wire Shelving, please contact our Customer Service Department at:

PHONE: **(800) 665-3760**

EMAIL: CustomerSupport@LogiQuip.net

ABOUT US

From quality products and services to patented, industry-leading innovations, LogiQuip has been providing smart, future-focused solutions exclusively to the healthcare industry since 1992. Our knowledgeable representatives partner with you to understand your needs, then design and implement the best solution for any space in your facility. With a focus on infection control, lean processes and ROI justification, our extensive line of products and services will help make your facility more effective and efficient now and for years to come.