

### **LOGICELL PAINTED STEEL SHELF- (CAT.#1624SHC-1)**

- LogiCell Single Column Shelf with Catheter Slide Mounts
- Accommodates up to 13 Dividers
- Accommodates up to 5 Catheters
- 35-LB. WT. Capacity
- Occupies 2 Cells

---


**SKU:** 1624SHC-1

**Categories:** [logicell-accessories](#)

**Tags:** [LOGICELL-SHELF](#)

## **PRODUCT DESCRIPTION**

LogiCell Metal Shelves are used to store larger or bulky items in the LogiCell units . The shelf has a 2 .5" H lip on the rear to prevent items from sliding back . The front slopes down 1" H to provide a labeling surface . The Metal Shelf can also be inserted in the reverse direction to retain items on the shelf in a slanted position . There are slots every 1" for attaching the Metal Divider to the Shelf, and an added channel across the rear and front that accepts Catheter Slides .

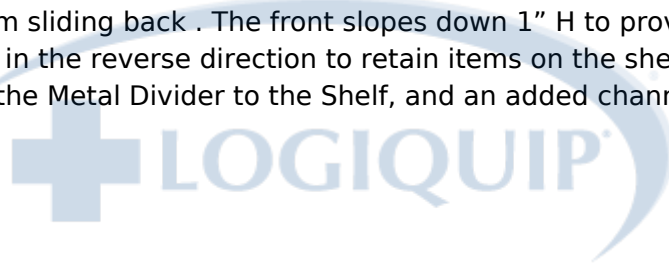

## **ADDITIONAL INFORMATION**

<b>Dimensions</b>	16 × 24 × 2.5 in
<b>Department</b>	<a href="#">cath-lab-ir-endoscopy</a> , <a href="#">sterile-processing</a> , <a href="#">supply-chain-clean-utility</a> , <a href="#">surgical-services</a>
<b>Product Line</b>	<a href="#">LogiCell</a>
<b>Product Category</b>	<a href="#">logicell-accessories</a>
<b>Product Subcategory</b>	<a href="#">logicell-shelves</a>
<b>Material</b>	<a href="#">STEEL</a>
<b>Finish</b>	<a href="#">PAINTED</a>
<b>Color</b>	<a href="#">PAINED STEEL</a>
<b>Tags</b>	<a href="#">LOGICELL-SHELF</a>