



# Intelli-Flip<sup>®</sup>

## INVENTORY MANAGEMENT



[www.logiquip.com](http://www.logiquip.com)

# WHY LOGIQUIP®?



## **EXPERT ADVICE. INNOVATIVE SOLUTIONS. 360 SERVICE.**

Healthcare exclusive since 1992, LogiQuip's Inventory Management Solutions are designed for Healthcare Professionals looking for a better way to manage supply chain tasks. With **Expert Advice**, **Innovative Solutions**, and **360 Service** that doesn't stop after the sale, LogiQuip's sole purpose is to ensure Healthcare Professionals have the supplies they need when they need them. Partnering with you to design and implement the right solutions, we give you time back to focus on what's important, Patient Care.

# OUR SERVICES TEAM

WITH LABOR SHORTAGES AND THE EVER-INCREASING DEMAND TO DO MORE WITH LESS, the **LogiQuip Services Team** can help to decrease that burden with turnkey solutions to help ensure you have the supplies you need when you need them.

## OUR SERVICES TEAM OFFERS

- Project Management
- On-Site Analysis
- Planning
- Installation & Conversion
- Ongoing Support



## Intelli-Flip™ is Simple & Responsive

— REDUCES SUPPLY CHAIN COSTS AND STOCKOUTS —

**NO**

SCANNING  
WEIGHT CALIBRATION  
WIRES

**SAVE 50 MINUTES  
PER PAR LOCATION PER DAY\*  
ON SUPPLY MANAGEMENT**

**ERP** INTEGRATION

NO NEED TO GO TO THE  
**PAR LOCATION**

\*Assumes 272 SKUs per PAR location with an average time savings of 11 seconds per SKU based on a case study done with Intelli-Flip.

# INTELLI-FLIP® SYSTEM

## LEAN INVENTORY MANAGEMENT

LogiQuip's **Kanban System** offers a variety of inventory management solutions utilizing Lean concepts to help eliminate waste in PAR locations throughout the hospital. Our **ParWire®**, **ParWall®** and **ParStor®** lines provide high-density storage. When paired with our patented **Kanban Flippers** and **Intelli-Flip® System**, inventory management is taken to a system-based solution that helps to reduce supply chain costs and eliminate stockouts.



↓ Lower Flipper into the **DOWN** position for inventory to be replenished



↑ Move the Flipper into the **UP** position once supplies are re-stocked

# HIGH DENSITY SHELVING

## HIGH DENSITY SHELVING

Fine Mesh Basket Shelving vs. traditional plastic Bins

- Fine Mesh Basket Shelving doesn't collect dust
- Allows for product to be easily identified
- Slide Out and Slanted Baskets are available for ease of use for both supply technicians and clinical staff
- Lanes are configurable every  $\frac{1}{2}$ "
- $\frac{1}{8}$ " wide Divider allows for maximum compaction vs. traditional plastic Bins that typically use 1-inch of space between each item



Up to 40% space savings when comparing the 2436CH LQS Flat Wire Shelf with traditional plastic Bins to PRRG2436 Fine Mesh Basket Shelf with Dividers and Kanban Flippers.

# HIGH DENSITY SHELVING



# KANBAN FLIPPERS

## KANBAN FLIPPERS

The **Intelli-Flip Monitor** easily attaches to our **Kanban Flipper**, and is triggered by the natural act of accessing the stock from the second bin.

- Highly compliant through the nursing's natural pick process
- The **Flipper** can support typical 50/50 lane splits
- The **Flipper** can also adapt to 20/80 or 70/30 lane splits
- Side-by-side **Kanban** is optional with "Sliding Door"



Wider lanes using the Kanban Sliding Door

# HOW IT WORKS

## FULLY STOCKED SHELVES GETTING SUPPLIES


When shelves are fully stocked, all of the **Kanban Flippers** are in the **UP** position. Easily obtain the supplies from the front **Bin** when you need them.

## PULL DOWN THE FLIPPER WITH INTELLI-FLIP

Once the supplies in the front **Bin** are gone, simply pull **DOWN** the **Kanban Flipper** with the **Intelli-Flip Monitor**. This simple act will trigger a signal that more supplies are needed in that **Bin**.

## CONTINUE TO GET SUPPLIES

While the need for more supplies is communicated through the **Gateway**, continue to use supplies from the back **Bin**, behind the **Kanban Flipper**, until the front **Bin** is restocked.

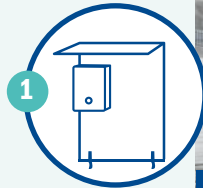

# PATENTED INTELLI-FLIP® SYSTEM

## OVERALL BENEFITS

- Reduction of stock-outs
- Ability to optimize inventory by location
- Reducing time spent counting & restocking
- Increased caregiver satisfaction

Intelli-Flip Controller  
that serves as a  
data consolidator or  
“gateway”

Intelli-Flip Monitor



# INTELLI-FLIP® SYSTEM

## INTELLI-FLIP® CONNECT

Intelli-Flip Connect is an exclusive feature that allows the system to move to a cellular connection if the Wi-Fi signal is lost. This helps to ensure you never lose information.



# INTELLI-FLIP<sup>®</sup> SYSTEM

## DASHBOARD

Tools and reports designed for you to efficiently manage your supply chain.



# HOW WE IMPLEMENT

## REVIEW EXISTING LAYOUT & PAR LEVELS

The LogiQuip **Services Team** is ready to work with you to review your existing space, supply usage, and your future goals to determine the best design for your unique situation.

## IMPLEMENT NEW DESIGN

Our **Services Team** is dedicated to providing on-time delivery and efficient installation of your **Shelving units** and **Intelli-Flip System** to get you up and running as quickly as possible.

## TRAIN STAFF

Start realizing the benefits of the **Intelli-Flip System** from day one with full system training with a member of our **Services Team**.



## PARCISE CONVERSION BUNDLE INCLUDES:

### PAR Optimization

The process of analyzing usage data (PAR levels) and making recommendations based on inventory levels.

### Cart Templating

Using PAR forms, item dimensions, and categorization data to design standardized cart layouts. (These templates are created using LogiQuip's proprietary algorithm; all are reviewed with clinical and supply chain leadership prior to implementation.)

### Assembly & Configuration

The physical assembly of **Carts** based on approved cart templates. Including the installation of **Dividers**, **Kanban Flippers**, **Label Holders**, and **ERP Labels**. Assembly can occur offsite to minimize disruption and ensure carts arrive pre-configured and ready for use.

### Supply Conversion

Process to transition existing supply rooms to a new system/layout, often involving collaboration between clinical teams and supply chain to ensure minimal disruption. The transition includes removal of outdated setups, installation of new **carts/shelving**, and restocking supplies in their new locations.

# PARCISE PLANNING TOOL™

## SAMPLE CART:

Using the **PARCise Planning Tool** and the process shown on page 14; the **Color Coded** 'like items' will be grouped together based on category.

**Color Coding** ranges from:

- A. Single Tier
- B. Multiple Tiers
- C. Mix of Colors – Some **Color Categories** could be split across a row/tier (dependent on the # of products)





(800) 665-3760 | [customerexperience@logiquip.net](mailto:customerexperience@logiquip.net)

LTSC-IF-1-26